



A simple calendar watch is a watch with a mechanism that displays the day of the week, date and month. Watches with this function must be adjusted every month with less than 31 days. The month's quick adjustment button simplifies the update.

Setting the day

Pull the crown out to position B
Turn counter-clockwise

Setting the date

Pull the crown out to position B
Turn clockwise

Setting the time

Pull the crown out to position C
Turn and check if it is morning
Or in the evening (see date change)

Month setting

Press pushbutton D